

Fire Alarm and Suppression Systems

Automatic Suppression System (extinguish flames)

Manual

1. flip cover
2. pull out the yellow pin
3. hit the blue knob



Total two suppression systems

Location

- 1.
- 2.



Emergency stop button

Hit the actuator, it cuts off the power supply to the kitchen appliance (e.g. wok, induction hobs, combi oven) , washing machine and dryer machine.

Flip the red cover and pull, it released the actuator



Note: When this button is activated, it does not send alarm nor reflect messages on the fire alarm panel. (Request made to Rachaya on 16th Dec for fire engineer who is due to come on 18th Dec if it can be programmed in such a way it links to the fire alarm panel ~ Sr Tejasa)

Revision #8

Created 25 November 2024 08:38:33 by Chloë

Updated 24 March 2025 09:05:09 by Sr Tejasa