

# Backup Generator

The petrol generator is in the Main Electrical Room on the side of the workshop.

## What is powered in the Kitchen

1. Sockets in the back wall (washing up)
2. Heat Pump ?
3. Hot Water ?

## Procedure

1. Move it with its cable outside the Kitchen
2. Plug the cables and the earth to the generator
3. Check fuel and oil
4. Start
5. Turn on switches on sockets
6. Turn on Main switch in attic

## Log

---

Revision #3

Created 4 December 2024 08:30:58 by Cittadhammo Bhikkhu

Updated 25 March 2025 09:47:16 by Cittadhammo Bhikkhu