

Disabled Toilet

The alarm is raised when a red cord is pulled in one of the disabled toilets.

The alarm goes off in the whole sala.

The red indication light next to the fire panel comes on to indicate which toilet is in emergency.

The rescuer goes to the toilet and can press "Call Accept" outside the toilet to silence the alarm.

The door can be unlocked from the outside using a flat-headed screwdriver.

After attending the issue press "Reset" inside the room.





Revision #4

Created 25 November 2024 22:03:56 by Sr Tejasa

Updated 25 March 2025 10:14:28 by Ruciro Bhikkhu