

Locks and Access Codes (restricted access)

Basic instructions for combination locks operation

To open: insert the code, turn the handle.

The code can be entered in any order or sequence e. g. 1234 or 4321 or 2431.

To cancel: press C, redial the code.

To fix the lock in the FREE ACCESS mode: The F button activates the code free entry feature, so if you require continuous free passage you will need to proceed as follows:

1. Enter your access code, but before depressing the lever press the F button.
2. You will now be able to rotate the handle freely without entering the code.
3. To cancel the free entry feature, press the F button followed by the C button and this will reset the unit.

Instructions leaflet (PDF)

Changing the combination code:

[Instructions PDF](#)

[Video](#) (on YouTube)

BorgLocks BL5000MK3 instructions image scans

Map of the Service Yard Locks & Lock codes for the Service Yard

(File visible only to EST users)

(enable links, set access privileges in GD: define who has access - ABC members?)

