

# Generator Maintenance

Old Google doc

## Trained Operators

Maurice (Maintenance), Cittadhammo Bhikkhu, Anagarika Ben

## Procedure

### Generator A for Bhikkhu Vihara (unleaded petrol)

- Stays in South West Entrance
- Use unleaded petrol only
  - Run out the petrol after usage
  - Need to be tilted for that

### Generator B for Kitchen (diesel)

- Stays in the Workshop
- Use Diesel Only, keep level low, but not run out.
- Keys are kept in Maintenance Office

## Common Procedure

- Bring generators outside workshop next to fuel station
- Tilt Generator A and empty Carburetor valve
  - 10 mm hex soft screw! Don't overtight!
  - Turn on Choke at start for 10 sec.
- Make sure all electric switches are turned off
- Check oil levels (when hot on a flat surface)

- Cover only when cool down and back to its place
- Run for one hour.
- Fill out the Log
- Do every 6 weeks

There is a log sheet attached to each generator

---

Revision #3

Created 4 September 2023 09:18:33 by Wiki Admin

Updated 5 September 2023 08:30:50 by Wiki Admin